


# Instruction Manual


DMG100

Digital Micron Gauge




# Parts Diagram

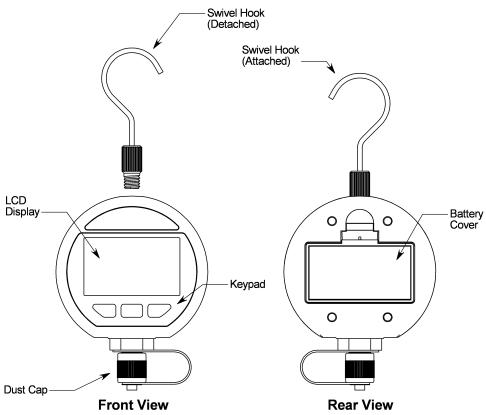

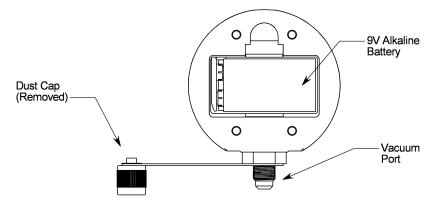

Rear View (Battery Cover Removed)

# LCD Display

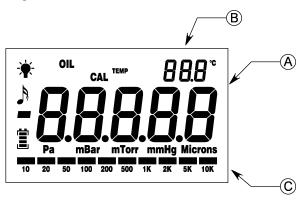

Item	Function		
Α	Main Numeric Display		
В	Alternate Numeric Display		
С	"Analog" Vacuum Level Bar Graph		
<del>\</del>	Backlight Indicator. Flashing: Temporary, Solid: Always On		
	Sound Indicator		
[111]	Battery Level Indicator		
OIL	Oil Sensor Indicator		
CAL	Calibration Mode Indicator		
TEMP	Indicates that Temperature is Displayed on the Alternate Numeric Display (during calibration)		
°C	Indicates degrees Celsius on the Alternate Numeric Display (during calibration)		
Pa	Pascal Units Indicator		
mBar	Millibar Units Indicator		
mTorr	Millitorr Units Indicator		
mmHg	Millimeters of Mercury Units Indicator		
Microns	Micron Units Indicator		

### Keypad



Item	Function
<b>(1)</b>	Press to Turn Power On, Press and Hold to Turn Power Off
UNITS	Press to Change Display Units
	Press and Release to Activate Backlight
A	Press and Hold to Mute/Un-mute Sound

#### **Ouick Start**

To operate the DMG100 as a basic vacuum gauge:

- 1. Install the battery as described in the "Battery Installation" section below.
- 2. Turn the power on by pressing **O**. The display will show **H !-P** to indicate pressure greater than 25,000 Microns.
- 3. Select the desired units by repeatedly pressing ...
- 4. Attach the DMG100 to the system to be evacuated with a high quality vacuum hose. Start the vacuum pump. Read the vacuum level from the Main Display.
- 5. Turn the power off by pressing and holding

### Battery Installation & Replacement

- Remove the battery cover from the rear of the DMG100 by compressing tab at the base of the battery cover.
- 2. If necessary, remove and detach old battery from battery clip.
- Attach battery clip to new battery and insert into battery compartment. Replace battery cover by aligning tab and snapping back into place.

IMPORTANT: TO PREVENT DAMAGE FROM LEAKING BATTERIES, DO NOT LEAVE A DEAD BATTERY INSIDE THE DMG100. REMOVE BATTERY IF THE DMG100 IS NOT TO BE USED FOR AN EXTENDED PERIOD OF TIME.

# Battery Level Indicator

The battery level indicator shows the relative strength of the battery. Four bars indicate full power. As the battery is depleted, the number of bars displayed decreases, until no bars are left. At this point, it is necessary to replace the batteries (refer to the Battery Installation section above). If the battery power drops to the point where the DMG100 can no longer function accurately, the alarm will beep 10 times and the power will turn off automatically. When the battery is replaced, and the DMG100 is turned back on, the DMG100 will resume operation with all previous settings intact.

#### Hi-Pressure Indication

If the sensed vacuum pressure exceeds 25,000 Microns (3333.1 Pa, 33.331 mBar, 25,000 mTorr, or 25.000 mmHg), the display will show H I - P.

### Sleep Mode

battery life up to 300 hours or more. While in this mode, the display will show **SLEP**. Approximately every 35 seconds, the gauge will automatically check the pressure and exit Sleep Mode if the pressure is less than 25,000 Microns. The gauge can be manually brought out of Sleep Mode by pressing any key on the keypad. While in Sleep, the gauge will beep twice every 5 minutes to remind you that it is on. The DMG100 will not sleep in the Calibration Mode (see the Calibration section on pg. 8).

#### Auto Power-Off

After 1 hour in "Sleep Mode" the DMG100 will automatically turn itself off to further conserve battery power.

#### Oil Sensor

It is necessary to prevent oil from being drawn into the Vacuum Sensor. For HVAC/R service, always recover refrigerant prior to attaching gauge. If possible, always close the blank-off valve on the vacuum pump prior to turning the vacuum pump off. Over time, oil vapor and other materials may contaminate the sensor. The DMG100 has a built in Oil Sensor that will detect this condition. If the OIL indicator on the display illuminates, this is an indication that the vacuum sensor has been contaminated and is no longer functioning accurately. If the sensor becomes completely saturated

with oil to the extent that it cannot function properly at all, the message **Lill** will show on the display. Prior to further use of the DMG100, clean the sensor as describe in the "Cleaning the Vacuum Sensor" on pg. 7.

#### Units

Change the displayed units by pressing the week when we have a support the horizontal control with the LCD display will show Pa, mBar, mTorr, mmHg, or Microns depending on the units set.

### Range and Resolution

The DMG100 has a broad vacuum pressure measurement range and very high resolution according to the table below:

	Vacuum Range	Resolution
Pascals (Pa)	0 — 3,333.1	0.1 Pa
Millibar (mBar)	0 — 33.331	0.001 mBar
Millitorr (mTorr)	0 — 25,000	1 mTorr
mmHg (mmHg)	0 — 25.000	0.001 mmHg
Microns (Microns)	0 — 25,000	1 Micron

### "Analog" Vacuum Level Bar Graph

The DMG100 also displays a Vacuum Level Bar Graph allowing for a quick visual determination of the vacuum level achieved. Each bar corresponds to a vacuum pressure range depending on units according to the following table:

	Units					
Bar Value	Microns	Pa	Millibar	Millitorr	mmHg	
10K	10,000 — ATM	1,000 — ATM	10 — ATM	10,000 — ATM	10 — ATM	
5K	5,000 — 10,000	500 — 1,000	5 — 10	5,000 — 10,000	5 — 10	
2K	2,000 — 5,000	200 — 500	2-5	2,000 — 5,000	2 — 5	
1K	1,000 — 2,000	100 — 200	1 — 2	1,000 — 2,000	1 — 2	
500	500 — 1,000	50 — 100	0.5 — 1	500 — 1,000	0.5 — 1	
200	200 — 500	20 — 50	0.2 — 0.5	200 — 500	0.2 — 0.5	
100	100 — 200	10 — 20	0.1 — 0.2	100 — 200	0.1 — 0.2	
50	50 — 100	5 — 10	0.05 — 0.1	50 — 100	0.05 - 0.1	
20	20 — 50	2 — 5	0.02 - 0.05	20 — 50	0.02 - 0.05	
10	10 — 20	1 — 2	0.01 — 0.02	10 — 20	0.01 — 0.02	

### Backlight

To activate the Backlight temporarily, press once. The indicator on the display will flash, and the backlight will turn off automatically after 1 minute. To activate the Backlight permanently, press again. The indicator on the display will show solid. Turn off the backlight by pressing

repeatedly until the indicator on the display will show solid. Turn off the backlight by pressing repeatedly until the indicator turns off. During Sleep Mode, the backlight will turn off to help conserve battery power, but will turn on again automatically upon resumption of normal operation if it was previously set in the permanent-on mode.

#### Sound

The DMG100 has an internal speaker that will emit a beep for each valid key press, and also functions as an alarm in the Calibration mode (see the Calibration section on pg. 8). It will also beep every 5 minutes in Sleep Mode. For silent operation, the sound can be muted by pressing and holding the ▶ key. The Calibration mode alarm is not affected by the mute status. The ▶ indicator on the LCD display indicates that the sound is on (not muted).

#### Swivel Hook

The DMG100's removable stainless steel swivel hook enables hanging of the gauge and will allow it to swivel freely in any direction. The gauge may be operated with or without the hook attached. When fastening the hook to the gauge, turn it finger tight only. Use of a tool to tighten the hook may result in damage to the DMG100 case.

#### Maintenance

The DMG100 should provide many years of service with no maintenance required. When not in use, the dust cap should remain in place over the sensor port. Clean the plastic enclosure with a damp (not wet) rag. Mild detergent is acceptable, but use no solvents. Take care not to expose the vacuum sensor to oil. If the Oil Sensor (see pg. 5) indicates a contaminated sensor, follow the Sensor Cleaning Procedure below.

### Cleaning the Vacuum Sensor

If the vacuum sensor becomes contaminated with oil (as indicated by the Oil Sensor), carefully follow this procedure:

- 1. Turn the DMG100 power off.
- 2. Shake the gauge to remove any large quantities of oil from the sensor.
- Apply a few drops of rubbing alcohol inside the sensor vacuum port. (DO NOT INSERT ANY OBJECT INTO THE PORT, AS THIS WILL PERMANENTLY DAMAGE THE SENSOR).
- 4. Place your finger over the port and shake for a few moments.
- Remove your finger and shake out the alcohol.
- Repeat steps (3) (5) at least three times.
- Allow the sensor to air dry over at least an hour, or pull a vacuum on the sensor to dry it more quickly.
- 8. Replace the battery and turn on the gauge. The Oil Indicator should be off. If it is still on, repeat the cleaning procedure.
- 9. If full accuracy is desired, perform a calibration cycle (see pg. 8)...

**Note**: It is important to remove all alcohol vapors from the sensor, either through air-drying or via vacuum. Any remaining vapors will cause an incorrect vacuum reading.

#### Calibration Test

The DMG100 should rarely require recalibration, though it may be necessary to know that your gauge is calibrated properly for full accuracy. The Calibration Test mode assures you that the DMG100 is calibrated to factory specifications. Test the calibration as follows:

- 1. Turn the DMG100 power off.
- 2. Important: Expose the DMG100 to atmospheric pressure.
- 3. Press and hold (do not release) the wey for about 5 seconds.
- 4. The display will show **CAL Lood** if the instrument is calibrated properly.
- 5. The display will show **CAL DOO** if the instrument requires calibration. Please see the Calibration section below.

#### Calibration

If the Calibration Test indicates recalibration is required, the gauge may be recalibrated. Unlike any other vacuum gauge, the DMG100 can be easily recalibrated to factory specifications without any special equipment, with the following procedure:

- 1. For best results, clean the sensor with alcohol prior to calibration. Ensure the sensor is completely dry before proceeding.
- 2. Turn the DMG100 power off. If necessary, install a fully charged battery into the gauge.
- 3. Place the dust cap over the vacuum fitting.
- 4. Hold while pressing . As soon as the power turns on, release and and then press quickly at least three times. The CAL indicator should illuminate, and should show on the Main Numeric Display. If not, turn the power off again and repeat.
- Place the DMG100 in a clear Ziploc (resealable zipper storage) bag, press out any extra air, and seal.
- Place the bagged DMG100 into a freezer with a temperature of less than -5°C (23°F).
- 7. Allow the DMG100 to cool to below -2°C (28.4°F). At this point, the alarm will sound and the display will change to **Hot**.
- 8. Remove from freezer and press any key to silence the alarm.
- Place the DMG100 undisturbed in an area with a room temperature of at least 23°C (73.4°F) but no greater than 30°C (86°F).
- 10. Allow the DMG100 to warm to 20°C (68°F). At this point, the alarm will sound, and **H** 1 **P** will show on the display.
- 11. Press any key to silence the alarm. The DMG100 is now calibrated to factory specifications.

**Note:** For accurate calibration, it is necessary to allow the DMG100 to warm slowly. Attempting to accelerate the warming by using a heat source will not provide satisfactory results. During the cooling/warming process, the temperature will be indicated on the Alternate Numeric Display in degrees Celsius. The calibration process may be canceled at any time by turning off the DMG100. The previous calibration will be unchanged.

### Restoring Factory Calibration

The original factory calibration can be restored at any time by the following procedure:

- 1. Turn the DMG100 power off.
- 2. Hold while pressing . As soon as the power turns on, release and and then press quickly at least three times. The CAL indicator should illuminate, and should show on the Main Numeric Display. If not, turn the power off again and repeat.
- 3. Press five times followed by
- 4. The gauge will beep 5 times and return to normal operation. The DMG100 is now reset to the original factory calibration.

#### Troubleshooting

Under certain conditions, the display may read - 0 1 1 - or 1 - or 1 Please use the table below to determine and fix the problem:

Display	Mode	Possible Problem	Solution	
	Normal Operation	Sensor Contaminated	Clean the Vacuum Sensor	
-0 1L -		Ambient Temperature too Low	Turn the BluVac off, warm the vacuum port with your hand, and turn the BluVac back on.	
	Calibration	Sensor Contaminated	Clean the Vacuum Sensor and Restart Calibration	
_	Calibration	Gauged Warmed too Quickly	Restart Calibration. Allow the Gauge to Warm Slowly	
Error		Gauge Disturbed During Calibration	Restart Calibration. Leave the Gauge Undisturbed During Warming Phase.	

# Low Temperature Operation

The DMG100 can operate accurately at temperatures as low as 10°F (-12°C). While operating below freezing (32°F/0°C), the display update rate will slow from 3.5 readings every second to one reading every two seconds.

A standard alkaline battey may not provide acceptable battery life at temperatures below 0°C (32°F). For low temperature operation, a 9V Lithium battery is recommended.

# Notes

### Notes

### DMG100 Digital Micron Gauge Limited Warranty

The **DMG100** Digital Micron Gauge is warranted to be free from defects in materials and workmanship for a period of one year from the date of purchase. If within the warranty period your instrument should become inoperative from such defects, the unit will be repaired or replaced at UEi's option, This warranty covers normal use and does not cover damage which occurs in shipment or failure which results from alteration, tampering, accident, misuse, abuse, neglect or improper maintenance. Batteries and consequential damage resulting for failed batteries are not covered by warranty.

Any implied warranties, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the express warranty. UEi shall not be liable for loss of use of the instrument or other incidental or consequential damages, expenses, or economic loss, or for any claim or claims for such damage, expenses or economic loss. A purchase receipt or other proof of original purchase date will be required (when repairable) for a service charge.

For return authorization and a service number contact UEi or visit us online.

Return the unit postage paid and insured to:

8030 SW Nimbus Avenue, Beaverton OR 97008

CALL: 1-800-547-5740 • FAX: (503) 643-6322 www.ueitest.com • Email: info@ueitest.com

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.



USA: 1.800.547.5740 • Fax: 503.643.6322 CANADA: 1-877-475-0648 • Fax: 604.278.8299

WWW.UEITEST.COM